

Step 1:
Circle the style of vest

Step 2:
Circle your colour choice

Step 3:
Circle your choice of hard &/or soft ballistic protection

1



Duke Standard Square / Wide Vest

- Plate Carrier front and back
- Everyday use with maximum comfort
- No pouches

- 1.1 Black
- 1.2 Green
- 1.3 Tan
- 1.4 Camo

2



Duke Concealed Vest

- Soft ballistic inserts ONLY
- VIP Protection and Undercover operations

- 2.1 Tan
- 2.2 Black

3



Duke Premium Vest

- Plate Carrier front and back
- Combat and Riot Control

- 3.1 Black
- 3.2 Green
- 3.3 Tan
- 3.4 Camo

4



Duke Executive Vest

- Plate Carrier front and back
- Combat and Riot Control

- 3.1 Black
- 3.2 Green
- 3.3 Tan
- 3.4 Camo

Duke Soft Ballistic Inners - Protection against Hand Guns
(jackets compatible with either square, wide or the combination of them both)

A



Level II Square - Protect against 9mm (124gr.) and .357Mag (158gr)

B



Level II Wide - Protect against 9mm (124gr.) and .357Mag (158gr)

C



Level IIIA Square - Protect against 9mm (124gr.) and .44 Mag (158gr)

D



Level IIIA Wide - Protect against 9mm (124gr.) and .44 Mag (158gr)

Hard Ballistic Plates - *Protection against Rifles*

In Conjunction with (ICW) Soft ballistic or Stand Alone (S-A) Jackets 1, 3 and 4.

Step 4:

Circle your choice of hard ballistic plates (if applicable)

ICW Plates

To be used *In Conjunction With Soft Armour Vests* (Level II soft armour for Level III plates and Level IIIA soft armour for Level IV plates)

In Conjunction With Soft Armour provides protection against:




No.	Plate designation	Composition	Weight (kg)	Side Plate Available	R1	AK Ball	R4		AK API	R1 AP	30.06 AP	1 - 99
					7,62 x 51mm Ball	7,62 x 39mm (MSC)	5,56 x 45mm (M193)	5,56 x 45mm (SS109)	7,62 X 39mm API	7,62 X 51mm AP	7,62 X 63mm AP	
ICW1	Level III ++ ULTRA-LIGHT	UHMWPE	0,98	✗	✓	✓	✓	✗	✗	✗	✗	POA
ICW2	Level III +++ SUPA LIGHT	Ceramic/UHMWPE	1,5	✗	✓	✓	✓	✓	✗	✗	✗	POA
ICW3	Level III SA Mix	Ceramic/Aramid/GRP	2,75	✗	✓	✓	✓	✓	✓	✗	✗	POA
ICW4	Level III SA Mix Ladies Front	Ceramic/Aramid	1,7	✗	✓	✓	✓	✓	✓	✗	✗	POA
ICW5	Level IV	Ceramic/UHMWPE	2,85	✗	✓	✓	✓	✓	✓	✓	✓	POA
ICW6	Level IV	Ceramic/Aramid/GRP	3,25	✗	✓	✓	✓	✓	✓	✓	✓	POA

S-A Plates (Stand Alone)

Can be used In Conjunction With Soft Armour Vests or on its own

Stand Alone (on its own) provides protection against:

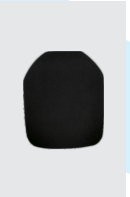

No.	Plate designation	Composition	Weight (kg)	Side Plate Available	R1	AK Ball	R4		AK API	R1 AP	30.06 AP	1 - 99
					7,62 x 51mm Ball	7,62 x 39mm (MSC)	5,56 x 45mm (M193)	5,56 x 45mm (SS109)	7,62 X 39mm API	7,62 X 51mm AP	7,62 X 63mm AP	
SA1	Level III ++ ULTRA-LIGHT - SA	UHMWPE	1,1	✓	✓	✓	✓	✗	✗	✗	✗	POA
SA2	Level III +++ SUPA LIGHT - SA	Ceramic/UHMWPE	1,9	✓	✓	✓	✓	✓	✗	✗	✗	POA
SA3	Level III +++ ULTRA-STEEL - SA	VHH Steel	2,85	✓	✓	✓	✓	✓	✗	✗	✗	POA
SA4	Level III SA Mix - SA	Ceramic/UHMWPE	2,85	✓	✓	✓	✓	✓	✓	✗	✗	POA
SA5	Level IV - SA	Ceramic/Aramid	3,85	✓	✓	✓	✓	✓	✓	✓	✓	POA
SA6	Level III +++ Ultra-Steel- SA	VHH Steel	3,8 - 4,2 (Large)	✓	✓	✓	✓	✓	✗	✗	✗	POA

Step 5:

Fill in your measurements

Male Measure sheet

Size Vest


Measuring Sheet below

S - L (P1)

XL - 2XL (P2)

3XL - 4XL (P3)

1. Measure around the body at the fullest part of the Chest and under the arms, with empty pockets.
2. Measure around the stomach at the belly button.
3. Measure from the V-notch which is at the top of the breast bone at the base of the neck, to the belly button. Whilst in a standing position.
4. Measure from the top of the spine at the base of the neck, to the top of the duty belt.
5. Measure from the V-notch which is at the top of the breast bone at the base of the neck, to the belly button. Whilst sitting down.
6. Height.
7. Weight.

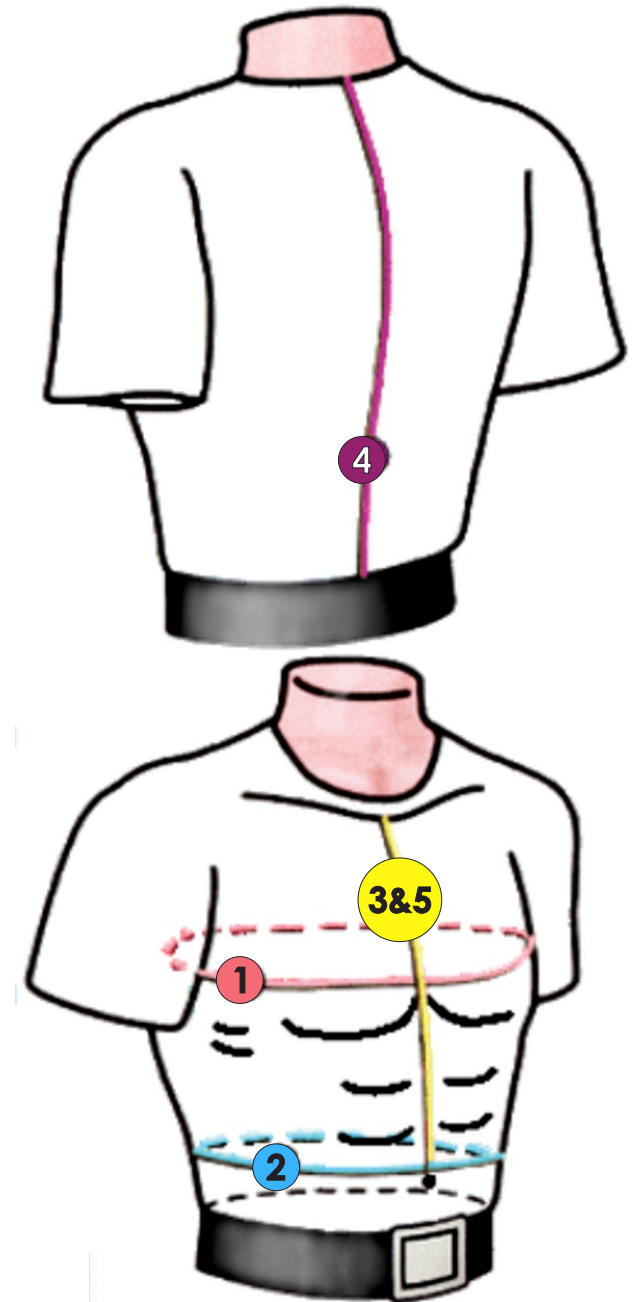 cm cm cm cm cm Kg

Step 5:

Fill in your measurements

Female Measure sheet Size Vest

Measuring Sheet below

S - L (P1)

XL - 2XL (P2)

3XL - 4XL (P3)

1. Measure around the body at the fullest part of the breast and under the arms, with empty pockets.
2. Measure around the chest underneath the breast.
3. Measure around the waist.
4. Bra size eg. 14C.
5. Height.
6. Weight.
7. Shoulder seam to nipple.
8. Nipple to the top of the duty belt.
9. Nipple to nipple.
10. Measure from the V-notch which is at the top of the breast bone at the base of the neck, to the top of the duty belt.
11. Measure from the top of the spine.

<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	Kg
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm
<input type="text"/>	cm

